

## Rod Head Part Numbers

<b>Code</b>	<b>First Digit</b> Outside Thread	<b>Second Digit</b> Inside Thread
RH	1 = 1/2-20	1 = Reserved
	2 = 9/16-18	2 = Reserved
	3 = 5/8-18	3 = Reserved
	4 = 3/4-16	4 = 10-32
	5 = 7/8-14	5 = 1/4-28
		6 = 7/16-20

**Example:** RH25 = RH 2 5 = RH x 9/16-18 x 1/4-28